

EUROHEATER 4D-HA-12-PORTABLE

Operation of the heater

CE approved

***Before you start using our product, we want your safety and optimal experience. Please take the time to read the instructions and guidelines carefully. These instructions contain important information about setup, use, maintenance and safety precautions. ***

- Place the heater outdoors, on a level surface.
- Connect the controller cable to the connector on the portable heater.
- Connect the 12V or 240V power cable to the corresponding electrical socket on the portable heater. Connect to 12VDC or 220VAC power source.
- Green light on the controller will flash several times. The heater is ready to start when the lights on the controller are off.
- Attach the hot air hose to the outlet of the portable heater.
- To start the heater, press the heating button once, the lower light is steady yellow. The heater will start in about one minute. 
- Adjust the hot air effect by turning the wheel on the controller.
- To stop the heater, press the Heat button  once. Lower light will begin flashing while the heater completes the cooling cycle.
- The heater is ready for new operation when the lower light is off. The power can then be switched off.
- When storing the heater, pull out the power cable and disconnect it from the power supply.
- Disconnect the controller cable. Store both cables and controls inside the portable heater.
- If the portable heater is equipped with a closable valve, keep the valve open when the heater is in use.
- Do not have diesel in the tank when the heater is stored out of season.
- Do not splice the power cable with the cigarette lighter plug.

Note: During the initial startup, the machine may give error code 02 (two orange flashes on the controller) due to unprimed fuel system. Let the heater stop, press the heat button  once to reset the heater, press a second time to restart the heater.

Fuel: Diesel, kerosene, lamp oil, F34 (recommended at cold temperatures or at high altitudes)



WARNING

- Never use the heater indoors.
- Do not remove power to heater during operation or shutdown cycle. Damage can occur.
- Keep the box closed during operation to prevent water damage to the heater.
- Carbon monoxide detector must be placed inside a heated room during operation of the heater.
- Keep the air hose outlet away from obstructions to prevent the heater from overheating.

www.Euroheater.no