 




Church Trucks

Model 87, Model 88 Series
Model 87 Cemetery Church Truck

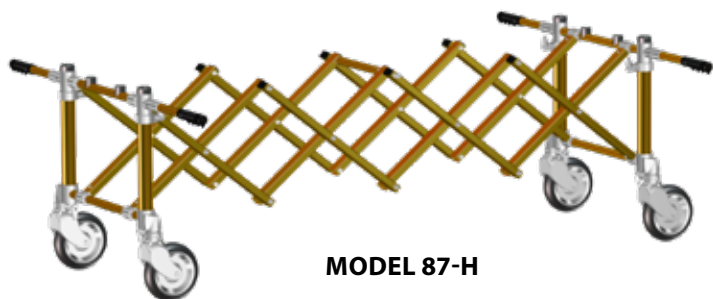

MODEL 87-H



MODEL 88-H



MODEL 87-CEMETERY CHURCH TRUCK

Read this Manual and Retain
for Future Reference



FERNO[®]

Instructions for Use

March 2024
Pub. No. 234-0038-08

Ferno Customer Relations

For ordering assistance or general information, contact your Ferno distributor or Ferno Customer Relations.

Ferno-Washington, Inc., 70 Weil Way
Wilmington, Ohio 45177-9371, U.S.A.

Information www.ferno.com
Authorized Service ferno.com/service-and-support

U.S., Canada	1.877.733.0911
International	Country Code +1.937.382.1451
Fax	1.888.388.1349



Ferno-Washington, Inc.
70 Weil Way
Wilmington, OH 45177-9371, U.S.A.
1.937.382.1451



FERNO S.r.l.
Via B. Zallone n.26
40066 Pieve di Cento (BO), Italy
+39 (051) 6860028



Ferno (UK) Ltd.
Ferno House, Stubs Beck Lane, Cleckheaton,
West Yorkshire, BD19 4TZ, UK
+44 (0) 1274 851 999

INSTRUCTIONS FOR USE



To request additional free manuals, contact Ferno Customer Relations, your Ferno distributor, or www.ferno.com.

Disclaimer

This manual contains general instructions for the use, operation and care of this product. The instructions are not all-inclusive. Safe and proper use of this product is solely at the discretion of the user. Safety information is included as a service to the user. All other safety measures taken by the user should be within and under consideration of applicable regulations and local protocol. Training on the proper use of this product must be provided before using this product in an actual situation.

Retain this manual for future reference. Include it with the product in the event of transfer to new users. Additional free copies are available upon request from Customer Relations.

Proprietary Notice

The information disclosed in this manual is the property of Ferno-Washington, Inc., Wilmington, Ohio, USA. Ferno-Washington, Inc. reserves all intellectual property rights, proprietary design rights, manufacturing rights, reproduction use rights, and sales use rights thereto, and to any article disclosed therein except to the extent those rights are expressly granted to others or where not applicable to vendor proprietary parts.

Limited Warranty Statement

The products sold by Ferno are covered by a limited warranty, which is printed on all Ferno invoices. The complete terms and conditions of the limited warranty, and the limitations of liability and disclaimers, are also available upon request by calling Ferno at 1.800.733.3766 or 1.937.382.1451.

Adverse Event Notice

In the event of an adverse event or serious incident related to the use of this device, the end user/operator must report the incident to Ferno-Washington, Inc. at 70 Weil Way, Wilmington, Ohio 45177 USA, 1-877-733-0911, or via email at tscoordinator@ferno.com. If the incident occurred in the European Union, report it to Ferno's Authorized EU Representative and the competent authority of the Member State in which the end user is established.

Disposal

Prior to disposal, clean and disinfect the product according to the Maintenance section of this manual. Recycle or dispose of the product following local protocols and regulations. Do not dispose of the product in municipal waste.

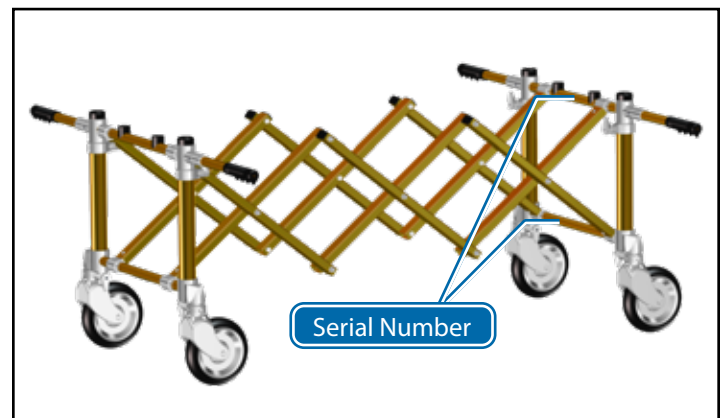



TABLE OF CONTENTS

Section	Page	Section	Page
Disposal _____	2	5 - Using the Church Truck _____	10
Ferno Customer Relations _____	2	5.1 Before Placing the Church Truck in Service _____	10
1 - Safety Information _____	4	5.2 General Guidelines for Use _____	10
1.1 Warning _____	4	5.3 Adjusting Church Truck Length (All Models) _____	10
1.2 Notice _____	4	5.4 Placing a Casket on the Church Truck (All Models) _____	11
1.3 Bloodborne Disease Notice _____	4	5.5 Rolling a Church Truck With a Casket On It _____	11
1.4 Symbol Glossary _____	4	6 - Maintenance _____	12
2 - Operator Focus _____	5	6.1 Maintenance Schedule _____	12
2.1 Operator Training _____	5	6.2 Service Life _____	12
2.2 Daily Operator Duties _____	5	6.3 Disinfecting and Cleaning _____	12
3 - About the Church Truck _____	5	6.4 Tire Pressure (Model 87-Cemetery Church Truck) _____	12
3.1 Description _____	5	6.5 Inspecting _____	12
3.2 General Specifications _____	6	6.6 Lubricating _____	13
3.3 Components _____	7	7 - Parts and Service _____	14
4 - Features _____	8	7.1 Ferno Parts and Service _____	14
4.1 Swivel Locks (Models 87, 87-H, 88, 88-H) _____	8	7.2 Parts List _____	14
4.2 Wheel Locks (Model 87-Cemetery Church Truck) _____	8	7.3 Parts Diagrams _____	15
4.3 Frame Locks (All Models) _____	9	8 - Accessories _____	16
4.4 Folding Handles (Models 87-H, 88-H, 87-Cemetery Church Truck) _____	9	Notes _____	17
4.5 Crossbar Handle (Models 87, 87-Cemetery Church Truck) _____	9	Training Record _____	18
		Maintenance Record _____	19

1 - SAFETY INFORMATION

1.1 Warning

Warning safety alerts indicate a potentially hazardous situation that, if not avoided, could result in injury or death.

 WARNING
Untrained helpers can cause injury or be injured. Permit only trained operators to operate the church truck.
Improper use of the church truck can cause injury. Use the church truck only for the purpose described in this manual.
Improper operation can cause injury. Operate the church truck only as described in this manual.
Helpers can cause injury or be injured. Maintain control of the church truck and direct all helpers.
Using the Model 87-Cemetery Church Truck/casket combination on a slope steeper than 15° can cause the church truck to tip, resulting in injury or damage. Use the church truck/casket on level surfaces whenever possible, and never on a slope steeper than 15°.
An unattended church truck/casket combination can move or be moved and cause injury or damage. Remain with the church truck/casket and maintain control of it at all times.
Improper maintenance can cause injury. Maintain the church truck only as described in this manual.
Improper parts and service can cause injury. Use only Ferno-approved parts and service on the church truck.
Modifying the church truck can cause injury and damage. Use the church truck only for its intended use.
Attaching improper items to the church truck can cause injury. Use only Ferno-approved items on the church truck.

1.2 Notice

Notices emphasize important, but not hazard-related information. Failure to follow Notices could result in product or property damage.











 









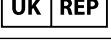


NOTICE

1.3 Bloodborne Disease Notice

To reduce the risk of exposure to blood or other potentially infectious materials when using the church truck, follow the disinfecting and cleaning instructions in this manual.

1.4 Symbol Glossary

Ferno uses, as applicable, the following safety and regulatory symbols.

Symbol	Definition
	General warning of potential injury
	Read the users' manual
	One trained operator required
	Load Capacity/Safe Working Load
	Do not lubricate
	Lubricate
	Lock
	Unlock
	Authorized Representative European Community
	Catalogue Number
	Serial Number
	Authorized Representative United Kingdom
	Consider instructions for use (ISO 7000)
	Compliant with United Kingdom standards
	Manufacturer
	Date of manufacture
	Keep away from sunlight
	Fragile; handle with care
	This way up
	Keep dry
	Handle with care
	Recycle
	Do not stack

2 - OPERATOR FOCUS

2.1 Operator Training

Operator using the church truck:

- must read and understand this manual.
- must have training on proper use of the church truck.
- must have a training on mortuary-service procedures.
- must practice with the church truck before using it with a casket and body.
- must keep training records. For a sample training record sheet, see page 18.

2.2 Daily Operator Duties

It is good practice for operators to check equipment at the start of each work shift. To check the church truck prior to use, follow the procedures described in this manual:

- Fold and unfold the church truck.
- Fold and unfold folding handles, if equipped.
- Roll the church truck in a circle to verify it rolls easily.
- Visually inspect the church truck for readiness. See "Inspecting" on page 12.

 **WARNING**

Untrained helpers can cause injury or be injured. Permit only trained operators to operate the church truck.

3 - ABOUT THE CHURCH TRUCK

3.1 Description

The church truck and cemetery church truck (called the church truck in this manual) are designed to display and transport a casket. The cemetery church truck can be used at a grave side.

Church trucks are constructed of round and rectangular aluminum tubing with a protective anodized finish. The X-frame undercarriage can be locked in four length positions to accommodate a wide range of casket sizes.

The church truck is for professional use only.

 **WARNING**

Improper use of the church truck can cause injury. Use the church truck only for the purpose described in this manual.

3.2 General Specifications

Specifications for the church trucks are shown in the table below. General specifications are rounded. Metric conversions are calculated before rounding the Imperial measurement.

Ferno reserves the right to change specifications without notice. For more information, contact Ferno Customer Relations or your Ferno distributor (page 2).





Load Capacity


Inspect the church truck if the load capacity has been exceeded. See page 12.

	Model 87	Model 87-H	Model 87-Cemetery Church Truck	Model 88	Model 88-H
Length – Bumper to Bumper (A)					
Folded	6 in (159 mm)	6 in (159 mm)	7 in (165 mm)	6 in (159 mm)	6 in (159 mm)
Position 1	19 in (502 mm)	19 in (502 mm)	19 in (489 mm)	16 in (406 mm)	16 in (406 mm)
Position 2	30 in (768 mm)	30 in (768 mm)	30 in (749 mm)	24 in (600 mm)	24 in (600 mm)
Position 3	50 in (1270 mm)	50 in (1270 mm)	50 in (1276 mm)	38 in (972 mm)	38 in (972 mm)
Fully Extended	61 in (1549 mm)	61 in (1549 mm)	61 in (1556 mm)	47 in (1181 mm)	47 in (1181 mm)
Length Overall (B)*	+1" (+25 mm)	+1" (+25 mm)	+2" (+51 mm)	+1" (+25 mm)	+1" (+25 mm)
Width					
Bumper to Bumper (C)	18 in (457 mm)	18 in (457 mm)	18 in (457 mm)	18 in (457 mm)	18 in (457 mm)
Width Overall (D)*	22 in (559 mm)	22 in (559 mm)	23 in (584 mm)	22 in (559 mm)	22 in (559 mm)
Handles Extended (E)	--	42 in (1054 mm)	42 in (1054 mm)	--	39 in (991 mm)
Height					
Folded	29 in (743 mm)	29 in (743 mm)	33 in (826 mm)	29 in (743 mm)	29 in (743 mm)
Fully Extended	22 in (559 mm)	22 in (559 mm)	25 in (641 mm)	22 in (559 mm)	22 in (559 mm)
Wheel Size	6 in (152 mm)	6 in (152 mm)	8 in (203 mm)	6 in (152 mm)	6 in (152 mm)
Swivel-Wheel Locks	4	4	--	4	4
Wheel Locks	--	--	2	--	--
Weight	36 lb (16 kg)	38 lb (17 kg)	59 lb (27 kg)	32 lb (14 kg)	34 lb (15 kg)
Load Limit	1000 lb (454 kg)	1000 lb (454 kg)	1000 lb (454 kg)	1000 lb (454 kg)	1000 lb (454 kg)


* Overall measurements are from wheel shank to wheel shank of all models except 87-Cemetery Church Truck, which is measured from the wheel plate to wheel plate.

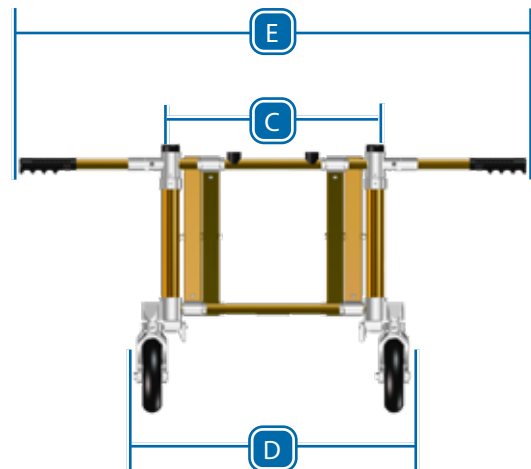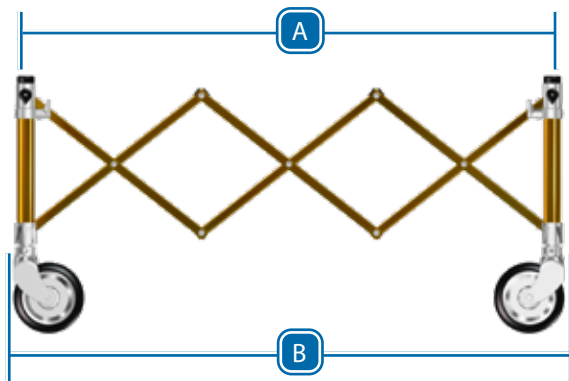


3.3 Components: Models 87 and 87-H

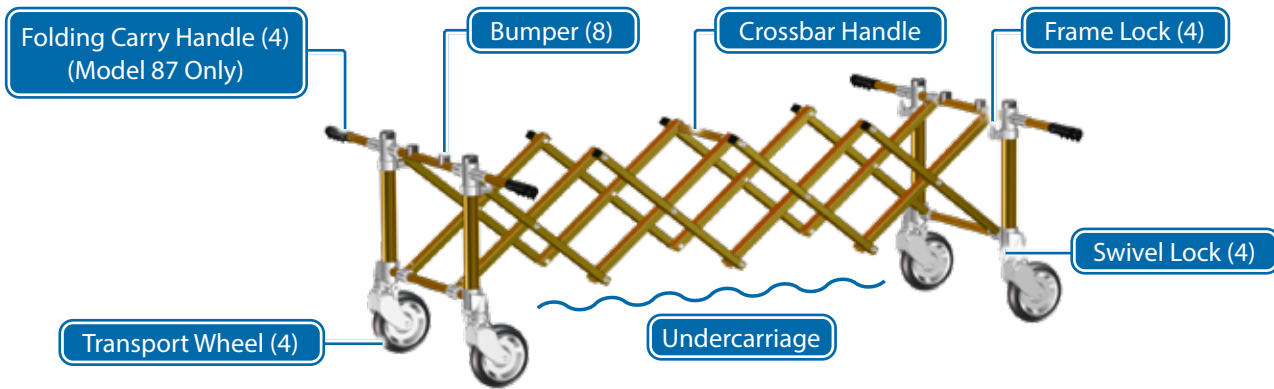

3.4 Components: Models 88 and 88-H

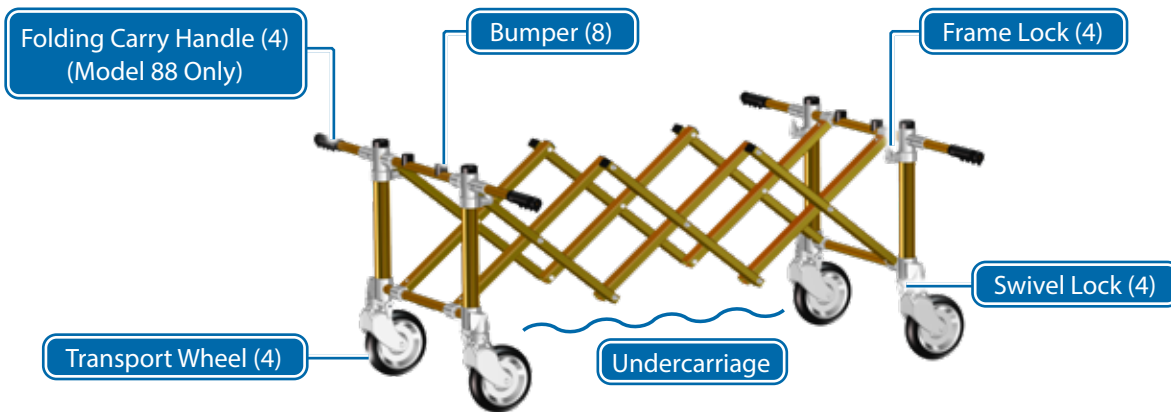

3.5 Components: Model 87 Cemetery Church Truck

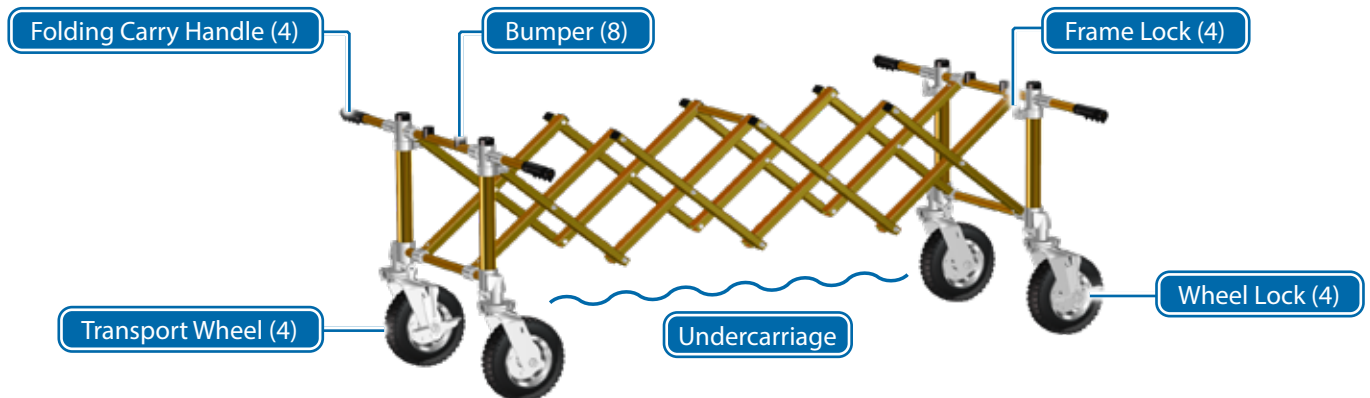

4 - FEATURES



4.1 Swivel Locks (Models 87, 87-H, 88, 88-H)

The swivel locks prevent the wheels from swiveling but not from rolling. Swivel locks engage at 90° angles (Figure 1), but not between those angles.

To engage a swivel lock, turn the wheel to the desired position and engage the swivel lock (Figure 2). Repeat with the other wheels.

To disengage the swivel lock, rotate the lock lever between the locking positions (Figure 2).

To prevent the church truck from rolling when it is stationary, position the wheels at right angles as shown in Figure 3 and engage all four swivel-lock levers.

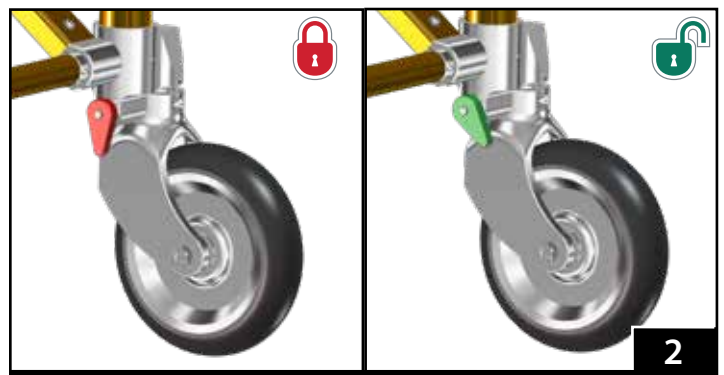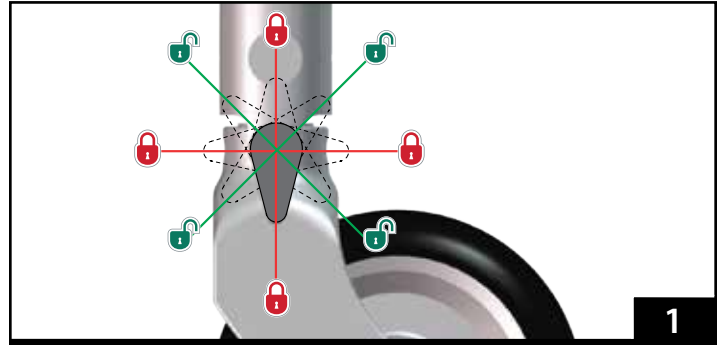



4.2 Wheel Locks (Model 87-Cemetery Church Truck)

The casters on two diagonal corners of the church truck are fitted with locks that prevent the wheels from rolling, but not from swiveling. When using the wheel locks:

- Engage both wheel locks.
- Keep the wheel locks engaged except when rolling the church truck.
- Stay with the church truck/casket and maintain control of the church truck at all times.

To engage a wheel lock, turn the wheel to the desired position and push the end of the lock down until it stops (Figure 4).

To disengage a wheel lock, push the opposite end of the lock down until it stops (Figure 4).

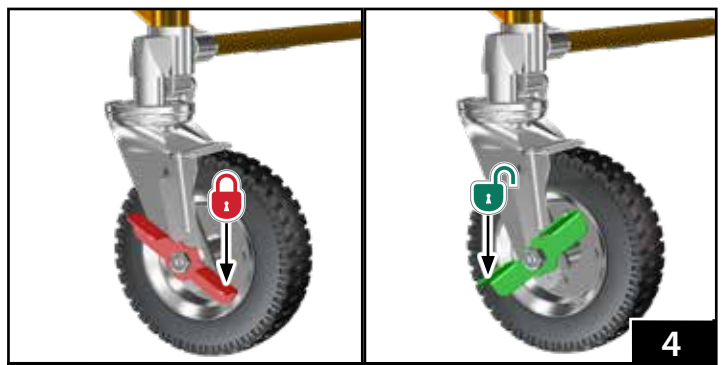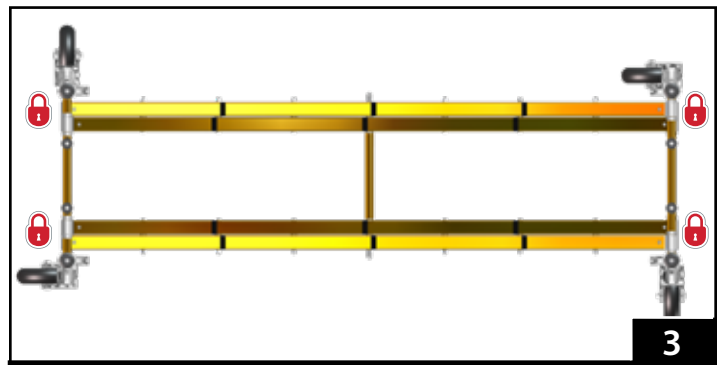

NOTICE


Keep the wheels locked except when rolling the church truck, and remain with the church truck/casket at all times. The wheel locks are not a substitute for operator control.

4.3 Frame Locks (All Models)

The undercarriage locks into position at four pre-set lengths. Engage **all four** frame locks to secure the undercarriage in the selected position.

To adjust the undercarriage length, disengage all four locks by rotating the lock levers down (Figure 5).


After adjusting the undercarriage length, rotate all four lock levers up to engage the locks (Figure 5).

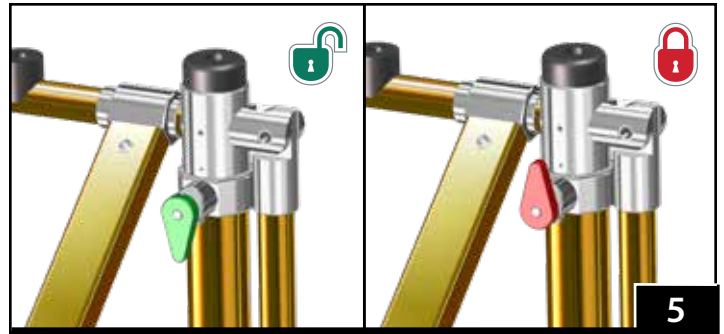

4.4 Folding Handles (Models 87-H, 88-H, 87-Cemetery Church Truck)

Models 87-H, 88-H, and the Model 87-Cemetery Church Truck are equipped with fold-out handles for use to roll and maneuver the church trucks.

Raise the handle until it stops at the horizontal position. To fold a handle, push the handle down to the vertical position (Figure 6).

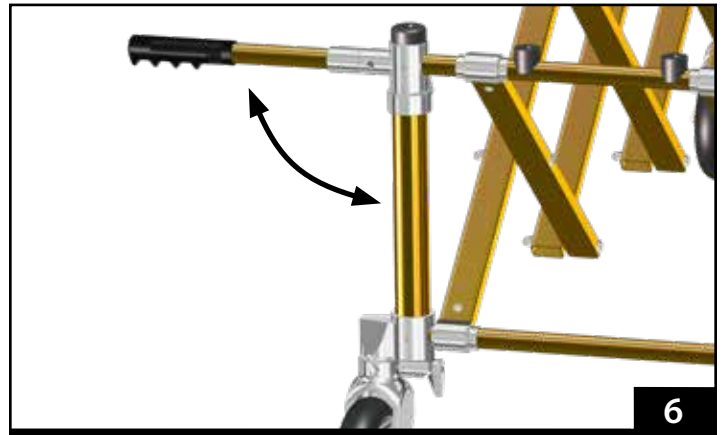

4.5 Crossbar Handle (Models 87, 87-Cemetery Church Truck)

When a Model 87 or Model 87-Cemetery Church Truck is folded, the center crossbar functions as a handle for rolling and lifting the church truck (Figure 7).



5 - USING THE CHURCH TRUCK

5.1 Before Placing the Church Truck in Service

- Personnel who will work with the church truck must read and understand this manual. Appropriate skills and training are also required. See "Operator Focus" on page 5.
- Confirm that the church truck operates properly. See "Inspecting" on page 12.

5.2 General Guidelines for Use

- It is the users' responsibility to ensure safe practices.
- The church truck is for professional use only.
- Rolling the church truck with a casket on it requires a minimum of two or four trained operators. Ferno strongly recommends that at least four trained operators be used with heavy loads and with the Model 87-H Cemetery Church Truck.
- Work together and maintain control of the church truck at all times.
- Use the church truck as described in this manual.
- Use the church truck only when it operates properly.
- Roll the church truck on smooth, unobstructed surfaces whenever possible.
- Do not roll the church truck sideways. Roll the showroom truck only with both hands grasping the main frame.

5.3 Adjusting Church Truck Length (All Models)

To adjust the church truck length:

1. Rotate all four frame locks down to the unlocked position. See "Frame Locks (All Models)" on page 9.
2. Grasp both ends of the church truck and move them apart or together until the church truck is near the desired length (Figure 8).
3. Engage all four frame locks (lock levers to the raised position) and adjust the church truck length a little more until the lock pins seat in the lock-pin holes with a click.
4. After every adjustment, confirm that all four frame locks are engaged by trying to move the ends of the church truck apart and together. If the locks are engaged, the ends will not move.

WARNING

Improper operation can cause injury. Operate the church truck only as described in this manual.

Helpers can cause injury or be injured. Maintain control of the church truck and direct all helpers.




Load Capacity

Inspect the church truck if the load capacity has been exceeded. See page 12.

NOTICE

After adjusting the church truck length, always confirm all four frame locks are engaged.

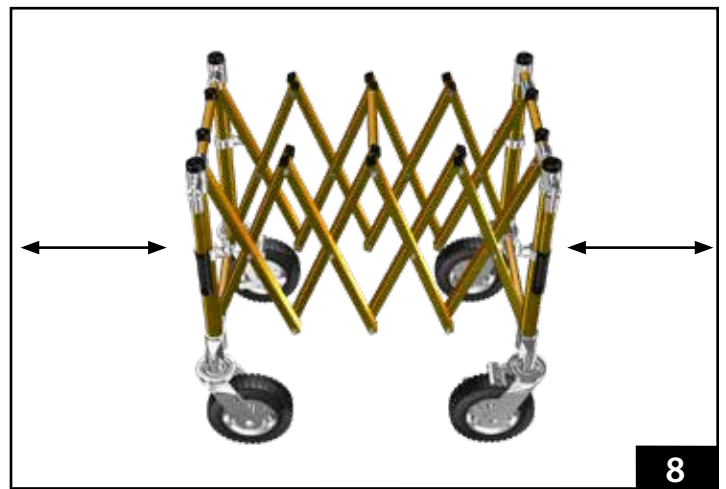

5.4 Placing a Casket on the Church Truck (All Models)

1. Park the church truck on a level surface.
2. Adjust the church truck length to be as long as possible while keeping the ends of the church truck beneath the casket (Figure 11). See "Adjusting Church Truck Length" on page 10.
3. Position and lock the wheels to help keep the church truck from rolling. See "Swivel Locks" and "Wheel Locks" on page 8.
4. Center the casket on the church truck rubber bumpers as you set it in place to ensure proper balance (Figure 9).



5.5 Rolling a Church Truck With a Casket On It

MODEL 87-CEMETERY CHURCH TRUCK

- Use a minimum of four operators to roll the church truck.
- Use the church truck on slopes less than 15°. On slopes steeper than 15°, the church truck/casket combination can become top-heavy and tip. Remain on level surfaces whenever possible.
- Stay with the church truck and maintain control of it at all times.
- Use the folding handles to roll the church truck by pushing it.
- To cross a low obstacle, grasp the handles and lift and pull the front wheels over the obstacle, then repeat with the trailing wheels.

MODELS 87, 87-H, 88, AND 88-H

- Use a minimum of two operators to roll the church truck. Ferno recommends using four operators when carrying a casket of standard size or larger.
- Stay with the church truck and maintain control of it at all times.
- Keep the church truck on level surfaces whenever possible.
- To maximize maneuverability and steering control, align the forward two wheels parallel with the long axis of the church truck and engage the swivel locks. Disengage the swivel locks on the trailing wheels.
- If equipped, grasp and use the folding handles to roll the church truck by pushing. If there are no folding handles, operators position themselves in pairs on opposite sides of the church truck, grasp the casket handholds, and push forward to move the church truck.
- To cross a low obstacle, grasp the folding handles and lift and pull the front wheels over the obstacle, then repeat with the trailing wheels. If there are no folding handles, operators should seek a ramp or an alternative route with no obstacles.

WARNING

Using the Model 87-Cemetery Church Truck/casket combination on a slope steeper than 15° can cause the church truck to tip, resulting in injury or damage. Use the church truck/casket on level surfaces whenever possible, and never on a slope steeper than 15°.

An unattended church truck/casket combination can move or be moved and cause injury or damage. Remain with the church truck/casket and maintain control of it at all times.

6 - MAINTENANCE

6.1 Maintenance Schedule

The church truck requires regular maintenance. Set up and follow a maintenance schedule. The table at right represents minimum intervals for maintenance.

Keep maintenance records. For a sample record sheet, see page 19.

When using maintenance products, follow the manufacturers' directions and read the manufacturers' material safety data sheets.

6.2 Service Life

Many factors affect a product's service life, including frequency of use (high-volume versus low-volume service); local environment (extreme temperature, high humidity, etc.); maintenance (adherence to the inspection and maintenance schedule); and other factors.

Follow the disinfecting, cleaning, and inspection procedures in this manual to ensure long life for the cot.

6.3 Disinfecting and Cleaning

To disinfect: Wipe all surfaces with disinfectant. Follow the disinfectant manufacturer's instructions for application method and contact time. Ferno recommends you inspect for damage as you disinfect.

To clean:

1. Hand clean all surfaces of the church truck with warm water and a mild detergent.
2. Rinse with warm, clear water. Dry the church truck with a towel or allow it to air-dry.

6.4 Tire Pressure

(Model 87-Cemetery Church Truck)

Check the air pressure in the church truck tires monthly. Keep the tires properly inflated at between 45-50 psi for safer and easier rolling and maneuvering. Do not exceed the manufacturer's maximum pressure rating shown on the tires.

6.5 Inspecting

Have your service's equipment maintenance personnel inspect the church truck regularly. Follow the checklist at right and operate the church truck through all its functions as described in this manual.

If inspection shows damage or excessive wear, remove the church truck from service until repair is made. See "Parts and Service" on page 14.

WARNING

Improper maintenance can cause injury. Maintain the church truck only as described in this manual.

Minimum Maintenance	Each Use or Daily	As Needed	Monthly
Daily Operator Duties (page 5)	•		
Disinfecting (this page)	•		
Cleaning (this page)		•	
Inspecting (this page)		•	•
Lubricating (page 13)		•	

NOTICE

Disinfectants and cleaners containing phenolics or iodines can cause damage. Do not use products containing these chemicals. If bleach is used, rinse with plenty of clear water to remove bleach residue.

Using abrasive cleaning compounds or applicators on the church truck can cause damage. Do not use abrasive materials to clean the church truck.

Water under high pressure, or steam, can penetrate joints, flush away lubricant, and cause corrosion. Use caution when cleaning moving parts such as joints and hinges, and reapply lubricant if needed. See "Lubricating" on page 13.

Inspection Checklist

- Are all components present?
- Is the church truck free of excessive wear?
- Are all screws, nuts, bolts, rivets, and roll pins securely in place?
- Do all moving parts operate smoothly and properly?
- Do all four frame locks function properly?
- Models 87, 87-H, 88, 88-H: Do all four swivel-wheel locks engage properly and stop the wheels from swiveling?
- Model 87-Cemetery Church Truck. Do both wheel locks engage properly and stop the wheels from rolling?
- Model 87-Cemetery Church Truck. Are the tires properly inflated?
- Do the wheels have tread?
- Do the folding handles fold and unfold properly?

6.6 Lubricating

Disinfect and clean the church truck before applying lubricant. Use the lubricants designated below to lubricate the church truck. Do not lubricate points marked with the “do not lubricate” symbol.

Use a small amount of lubricant (one or two drops). Lubricate identical points on each side of the church truck. After applying lubricant, wipe off any excess.

1. All Models: Lubricate between casting and rings. There are four castings each end of truck (16 total lubrication points).
2. Lubricate washers at both sides of every outer tube:
Models 87, 87-H, 87-Cemetery Church Truck: (20 per side)
Models 88, 88-H: (14 per side)
3. Model 87-Cemetery Church Truck: Use grease gun to lubricate Zerk-style grease fitting on each caster. Wipe away excess grease (4 total lubrication points).

LUBRICATION POINTS






1.	Rings	E-Z-1 or SAE 30-weight oil (1-2 drops)
2.	Washers	E-Z-1 or SAE 30-weight oil (1-2 drops)
3.	Grease Fitting (Zerk)	Multi-purpose automotive grease

LUBRICATION-FREE ITEMS

⊗	Frame Lock (all models)	Do not lubricate
⊗	Swivel-Wheel Lock (87, 87-H, 88, 88-H)	Do not lubricate
⊗	Wheel Lock (87-Cemetery Church Truck)	Do not lubricate

NOTICE

Lubricating parts that should not be lubricated allows dirt and foreign particles to collect on those parts, resulting in damage. Lubricate only the numbered reference points shown.

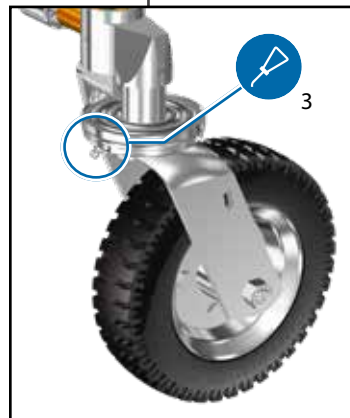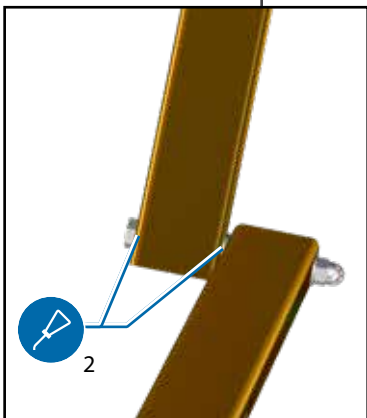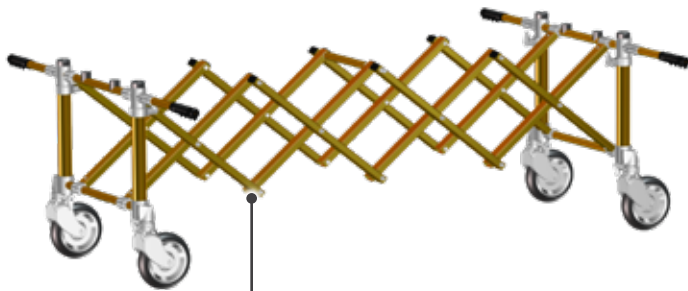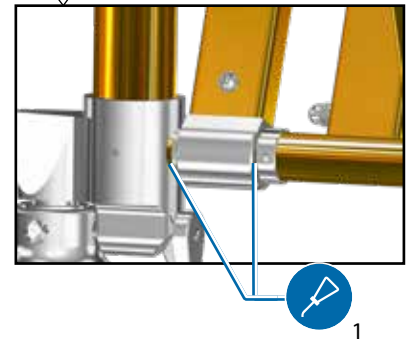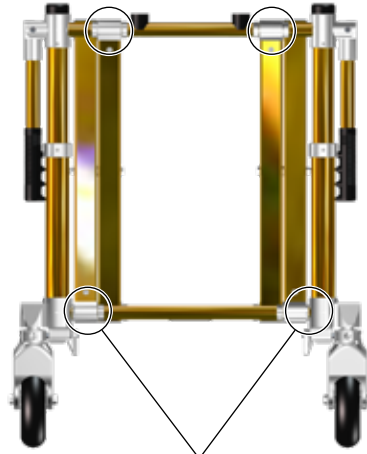

7 - PARTS AND SERVICE

7.1 Ferno Parts and Service

For parts or professional repair, contact your Ferno distributor, Ferno Customer Relations, or visit our website for a list of Authorized Service providers.

Ferno-Washington, Inc., 70 Weil Way
Wilmington, Ohio 45177-9371, U.S.A.

Information www.ferno.com
Authorized Service ferno.com/service-and-support

U.S., Canada 1.877.733.0911
International Country Code +1.937.382.1451
Fax 1.888.388.1349

WARNING

Improper parts and service can cause injury. Use only Ferno-approved parts and service on the church truck.


Modifying the church truck can cause injury and damage. Use the church truck only for its intended use.

7.2 Parts List


Both metric and Imperial style fasteners are provided in the kits. If your serial number is 09N111746 or greater, use the supplied metric fasteners. If your serial number is less than 09N111746, use the supplied Imperial fasteners.

No.	Part	Description	Qty
1	090-5943	Bumper Kit with Hardware - Rubber bumper (4) - Non-Marking Rubber Tip (8)	1
2	090-5942	Plastic Cap Kit - Round (4) - Rectangle (4)	1
3	090-5944	Frame Lock, Position-Lever Assembly	1
4	090-5947	Black Handle Grip	1
5	090-5941	Wheel with Caster Assembly (87, 87-H, 88, 88-H)	1
6	090-5945	Swivel Lock, Lever Assembly (87, 87-H, 88, 88-H)	1
7	090-5952	Cemetery Church Truck Wheel With Lock	1
8	090-5951	Cemetery Church Truck Wheel No Lock	1
9	090-5946	87/88 Hardware, Metric and Imperial (n/s)	1


7.3 Parts Diagrams

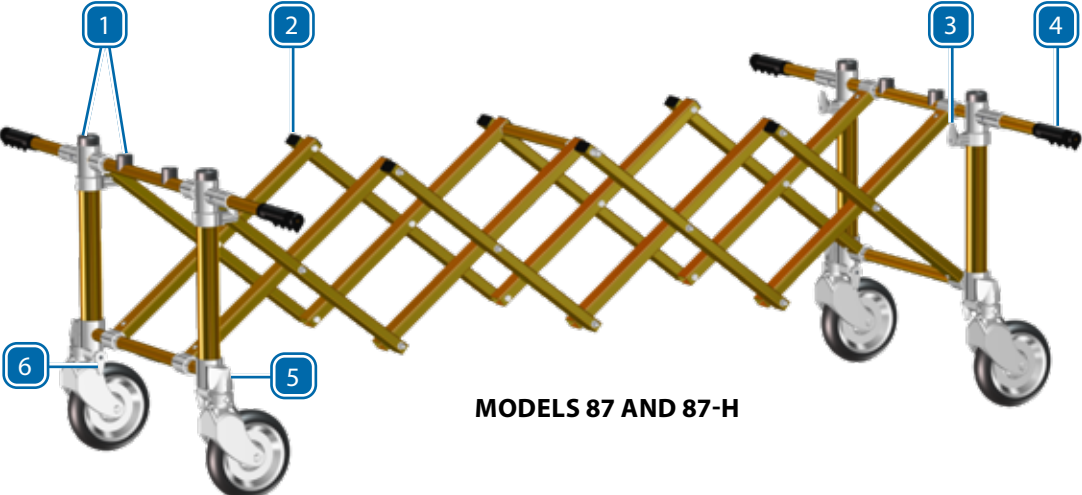

MODELS 87 AND 87-H

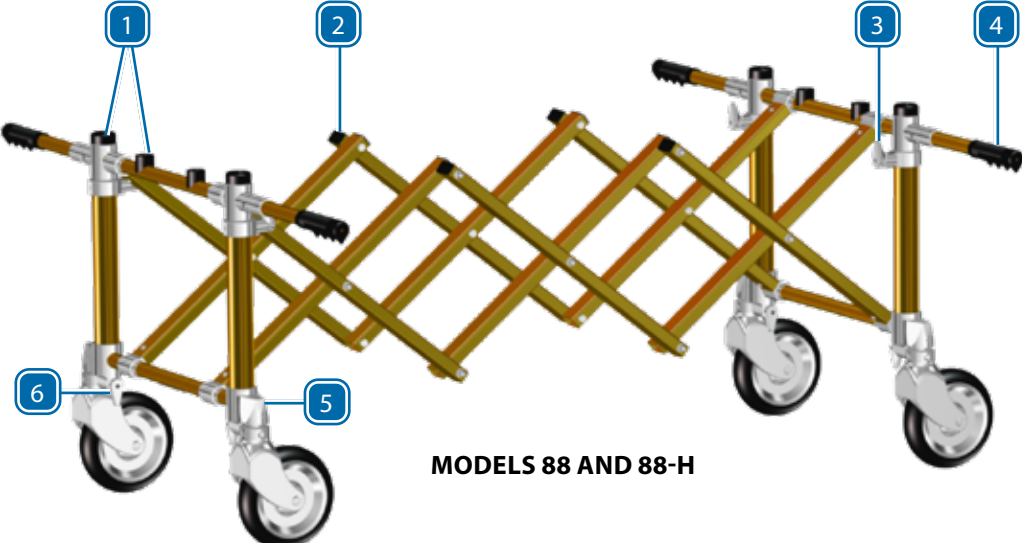

MODELS 88 AND 88-H

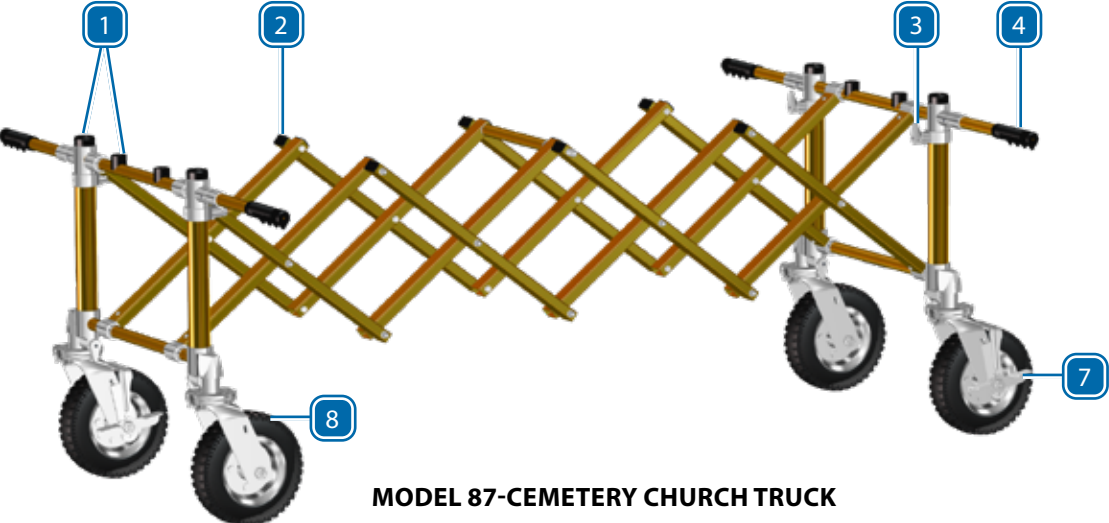

MODEL 87-CEMETERY CHURCH TRUCK

8 - ACCESSORIES

Ferno offers a full line of accessories approved for use with the church truck. Follow all instructions in accessory users' manuals. Keep the instructions with this manual.

When using accessories, be aware of any special considerations such as doorway heights and widths, or other factors which may be affected by the addition of the accessory/accessories to the church truck.

Contact Ferno Customer Relations (page 2) or your Ferno distributor for product information.

 **WARNING**

Attaching improper items to the church truck can cause injury. Use only Ferno-approved items on the church truck.

DRAPES

Drapes provide a curtain around the church truck to conceal it.

- Model 87-D Drape is for Model 87 Church Trucks
- Model 88-D Drape is for Model 88 Church Trucks

Drapes are not compatible with models 87-H, 88-H or 87-Cemetery Church Trucks.

COVERS

Ferno church truck covers allow you to protect your church truck from dust and scratches while in storage. The Model 401 is designed for use on church trucks without drapes. The Model 402 is designed for use on church trucks with drapes.

NOTES

TRAINING RECORD

Date	Printed Name	Signature	Training Method			Trainer Initials
			Read Manual	Video/ Online	Hands-On	

Aviation

Military

Mortuary

EMS

Rescue
