




INTRAXX TRACK SPACING GUIDE

This document provides guidance on the recommended spacing of iNTRAXX tracks when incorporating iNCAB cabinets, iNCASE Multi-Mounts, and SafeSeat seating into vehicle fit-outs. The information is intended to assist in achieving correct track layouts while ensuring compatibility and optimal use of these components within the iNTRAXX system.

iNCAB Modular Cabinets

If planning to use iNCAB cabinets, it is critical that the top edge of track is a **minimum of 76 mm** below ceiling height.


This minimum spacing is required to allow iNCAB doors to fully open.

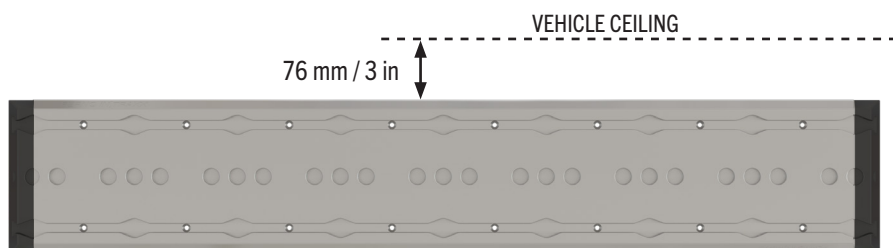

SafeSeat

If planning to use iNTRAXX SafeSeats:

- Track A's lower edge must be 363 mm from the floor
- Track B's lower edge must be 668 mm from the floor.

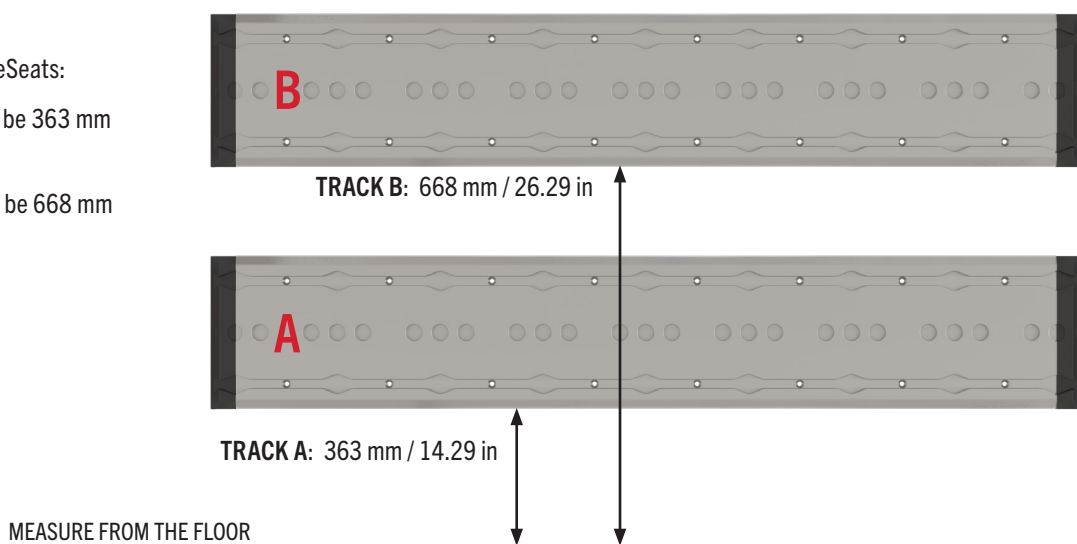

iNCASE and MultiMount

iNCASE is secured to two iNTRAXX tracks using two MultiMount plates with SafeMounts (0480201). One MultiMount plate is attached to the upper track and the other to the lower track.


iNCASE features four feet on each half that engage with corresponding keyholes in the MultiMount plates. When fully opened, the iNCASE fabric hinge allows up to 25 mm of vertical flex. To ensure correct engagement of the iNCASE feet, the vertical distance between the keyholes on the upper and lower MultiMount plates must be between 508 mm and the optimum distance of 533 mm.

Each MultiMount 2-Row plate provides ten vertical SafeMount positions spaced at 25 mm intervals. This allows the SafeMounts to be adjusted to suit different distances between the tracks, ensuring the MultiMount plates are correctly positioned to securely engage the iNCASE feet.

TRACK SPACINGS: Due to the vertical adjustability of the MultiMount plates, tracks can be installed at any spacing between the prescribed minimum and maximum spacings, in 25 mm increments.

The matrix below provides:

- The minimum, maximum, and optimum track spacings for two-track installations.
- The corresponding SafeMount position on the upper and lower MultiMount plates.
- Compatibility with iNCASE and legacy SafePak products.

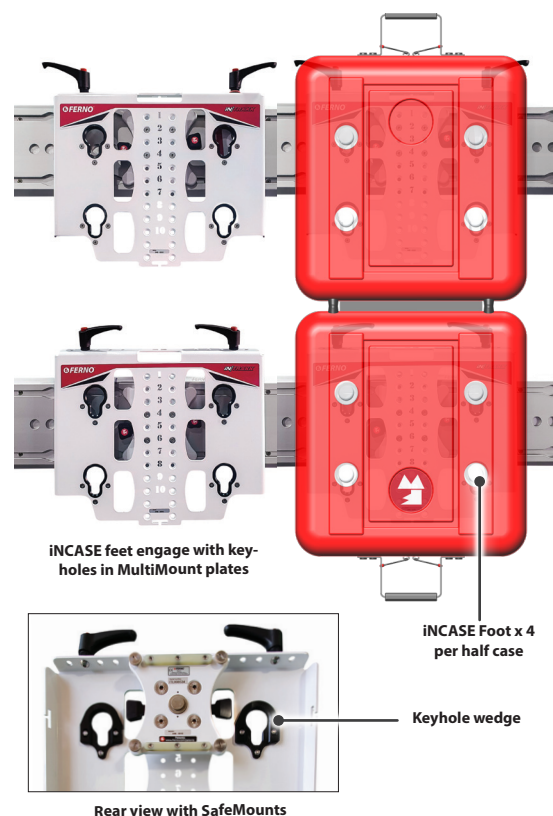

LAYOUT STYLE	TRACK SPACING (Bottom of upper track to bottom of lower track)	MULTIMOUNT SPACING (Upper to Lower Plate: keyhole to keyhole)	UPPER PLATE: SAFEMOUNT POSITION	LOWER PLATE: SAFEMOUNT POSITION	iNCASE	SAFEPAK Regular
Custom layout	283 mm (Minimum)	508 mm	10	1	✓	✓
Custom layout	308 mm	533 mm (Optimum)	10	1	✓	✓
Custom layout	733 mm	508 mm	1	10	✓	✓
Custom layout	758 mm (Maximum)	533 mm (Optimum)	1	10	✓	✓
TracLiNXX Combo	508 mm	508 mm	1	1	✓	✗
TracLiNXX Combo	508 mm	533 mm (Optimum)	2	1	✓	✓

